


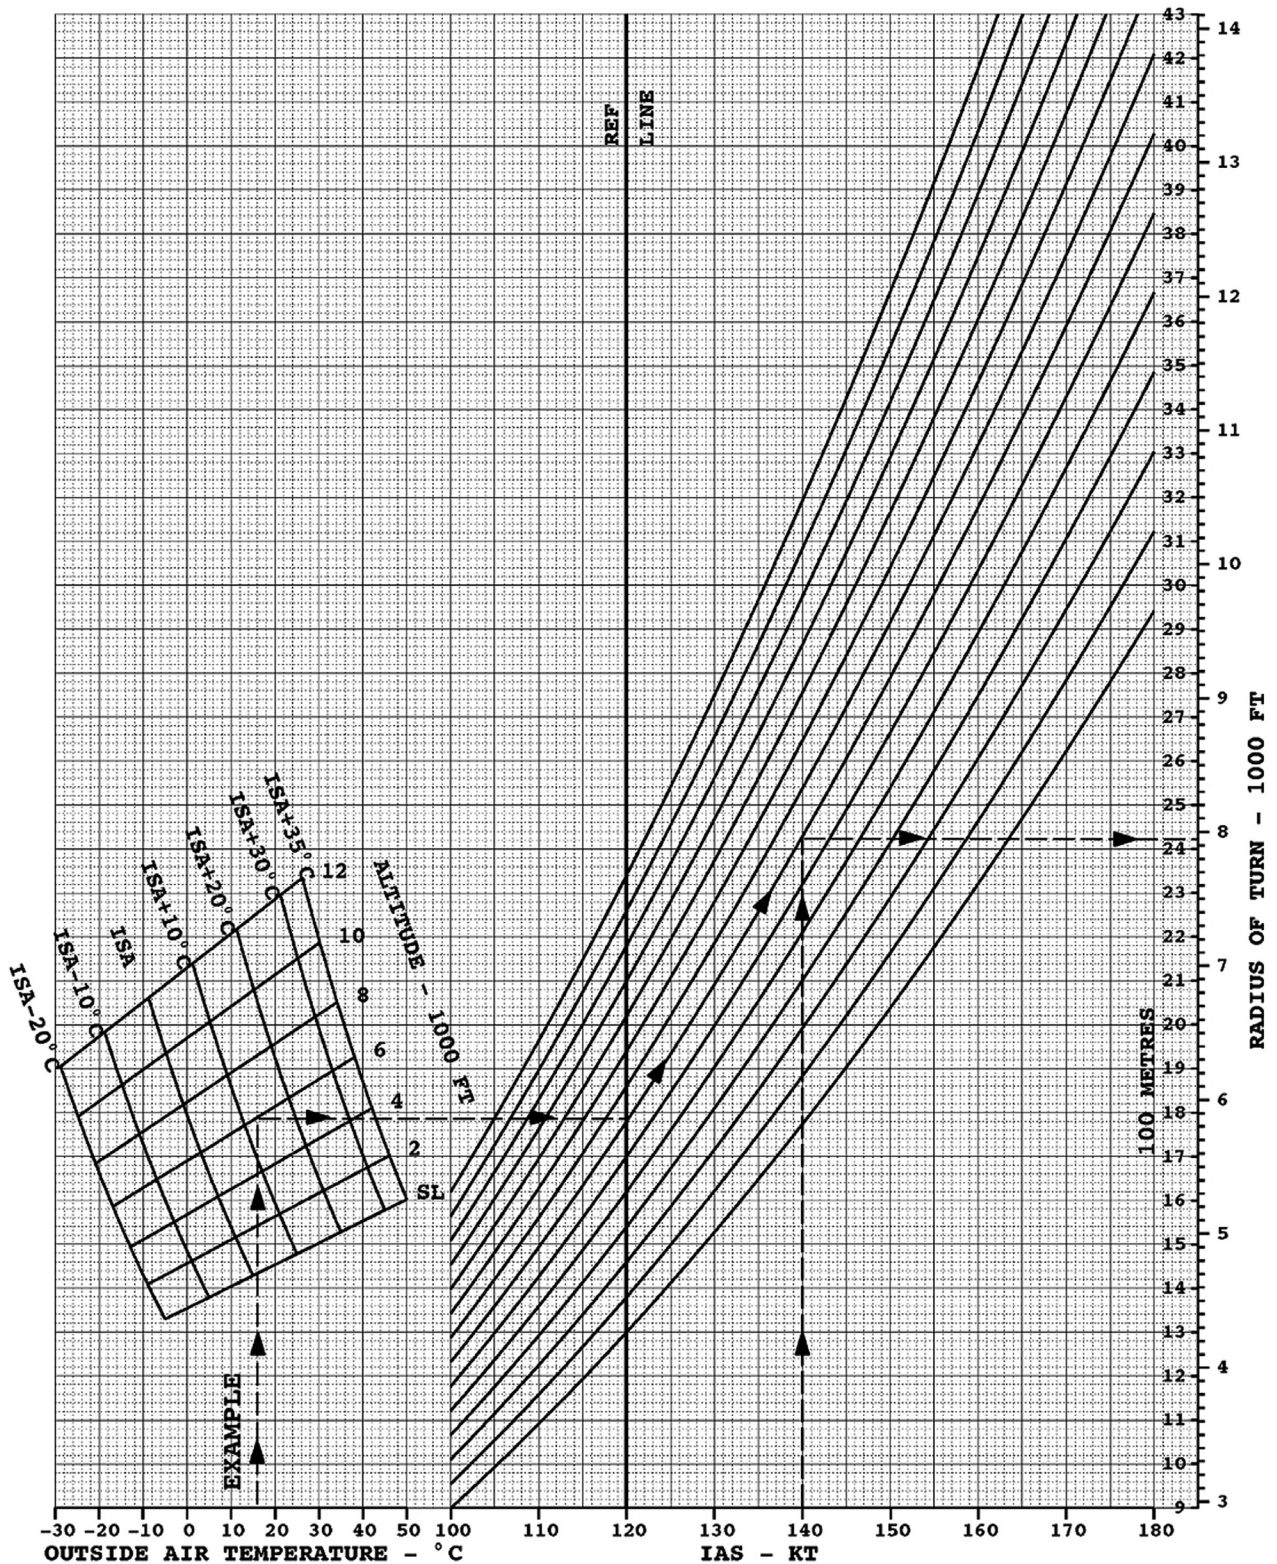

**NET TAKE-OFF FLIGHT PATH  
RADIUS OF STEADY 15° BANKED TURN**



Illustrations and materials were used with permission from Bombardier.

Figure 481